


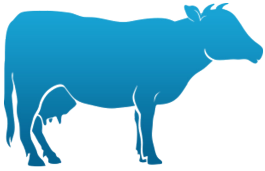


# Acid Descaler / Milkstone Removal




## WASH

1. Wash outside of cluster and attach cluster to jettets. Remove milk filter.

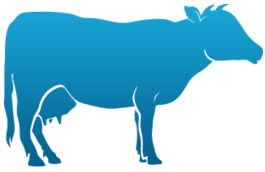


## RINSE

2. Rinse plant with 10-15 litres of cold or warm clean water per cluster.

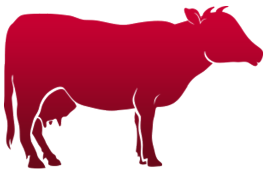


## CLEANING PREPARATION SOLUTION

3. Make up the acid solution using an approved acid detergent at the recommended rate in hot water (75°C to 80°C) allowing 10-15 litres of solution per cluster.  
Note: some acid detergents can be used cold with increased circulation time.

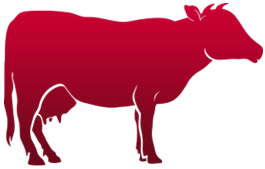


## CLEANING

4. For hot solution circulate for 8-10 minutes and then run to drain.  
For cold solution circulate for 10-15 minutes and then run to drain.

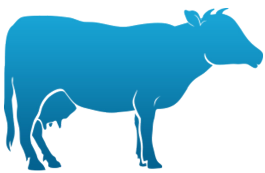

## RINSE

5. Rinse plant with 10-15 litres of cold, clean water per cluster.

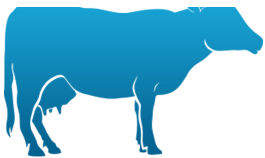

## CHECK

6. Ensure the milk lines are completely drained before milking.

